

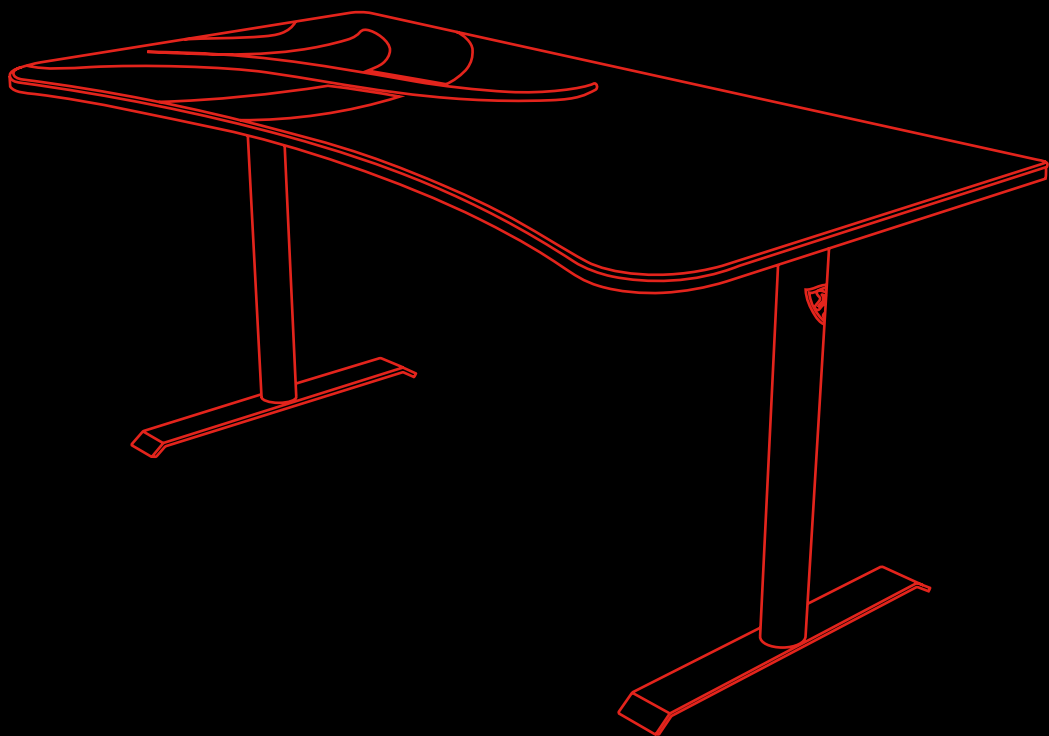
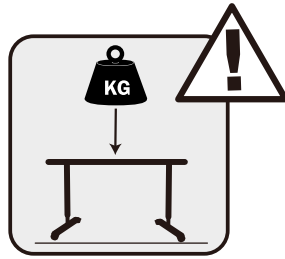
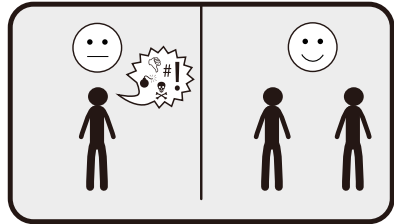
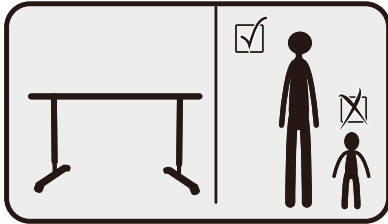


ASSEMBLY GUIDE

ARENA

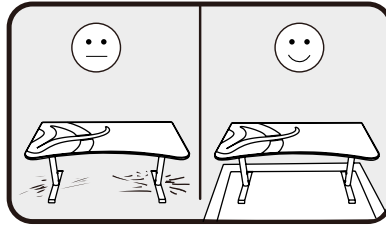

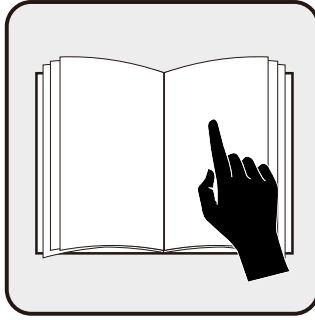


A




x8

B




x16

C




x8

D













x14

E




x6

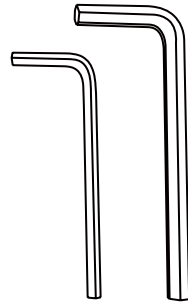



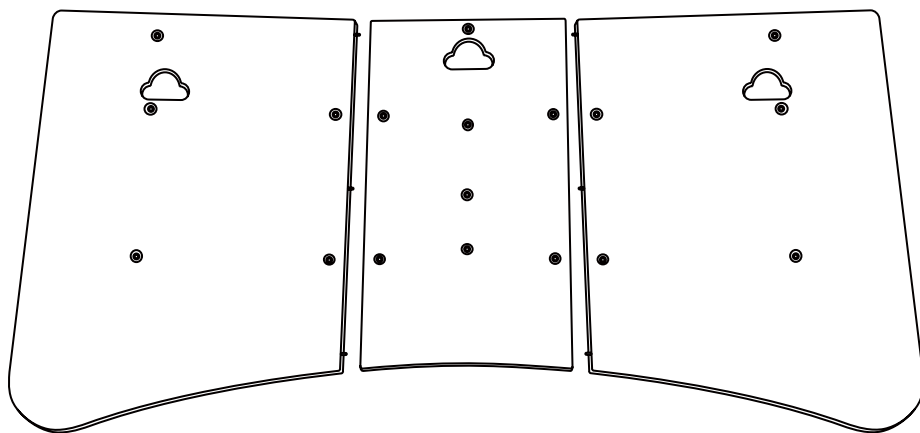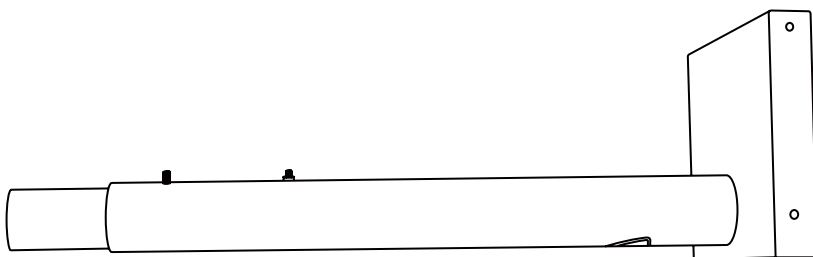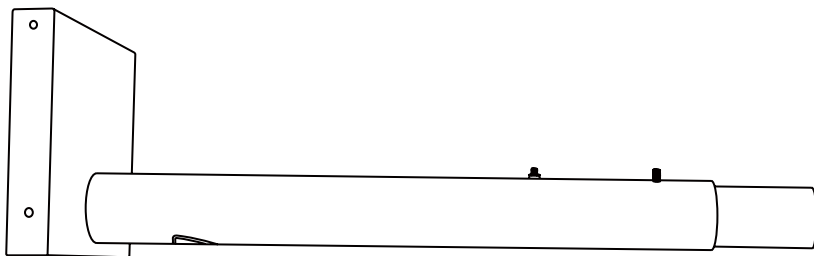

1

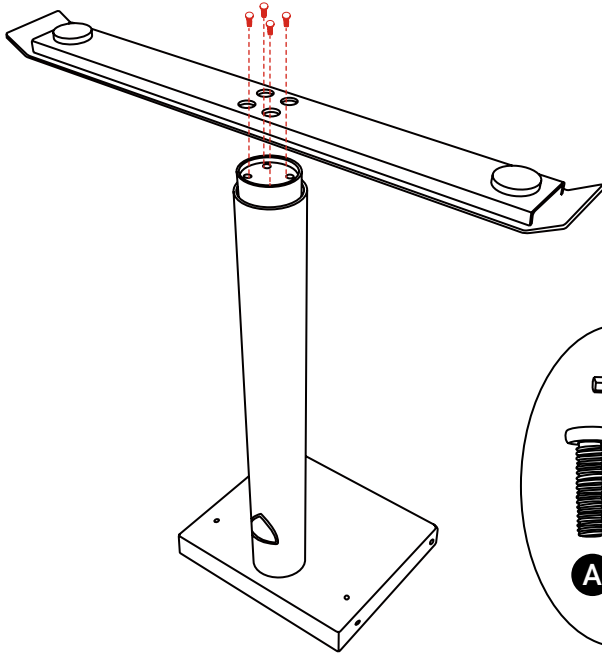

2

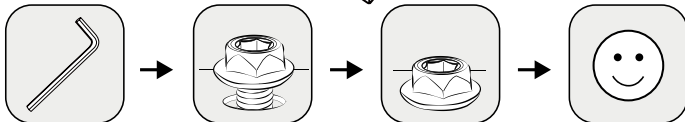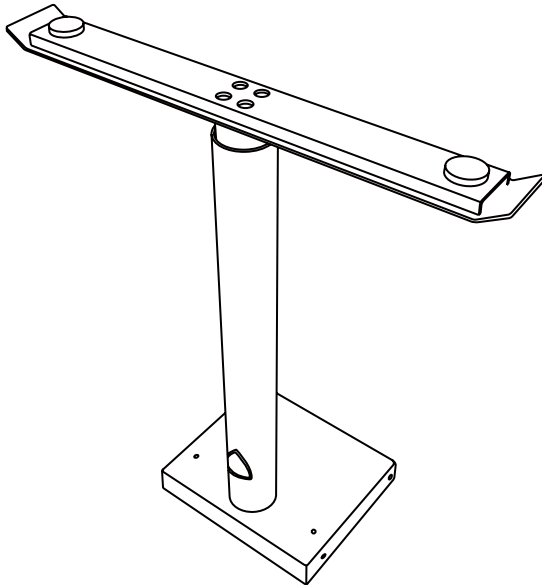







ATTENTION!



Do not fully screw in the bolts until **step 10**. For more details, look at the video:




3

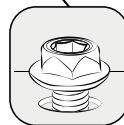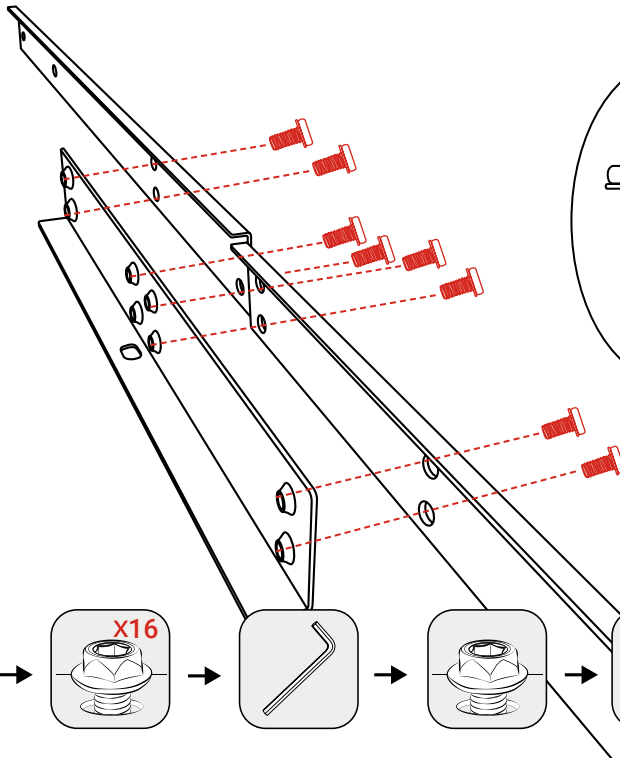


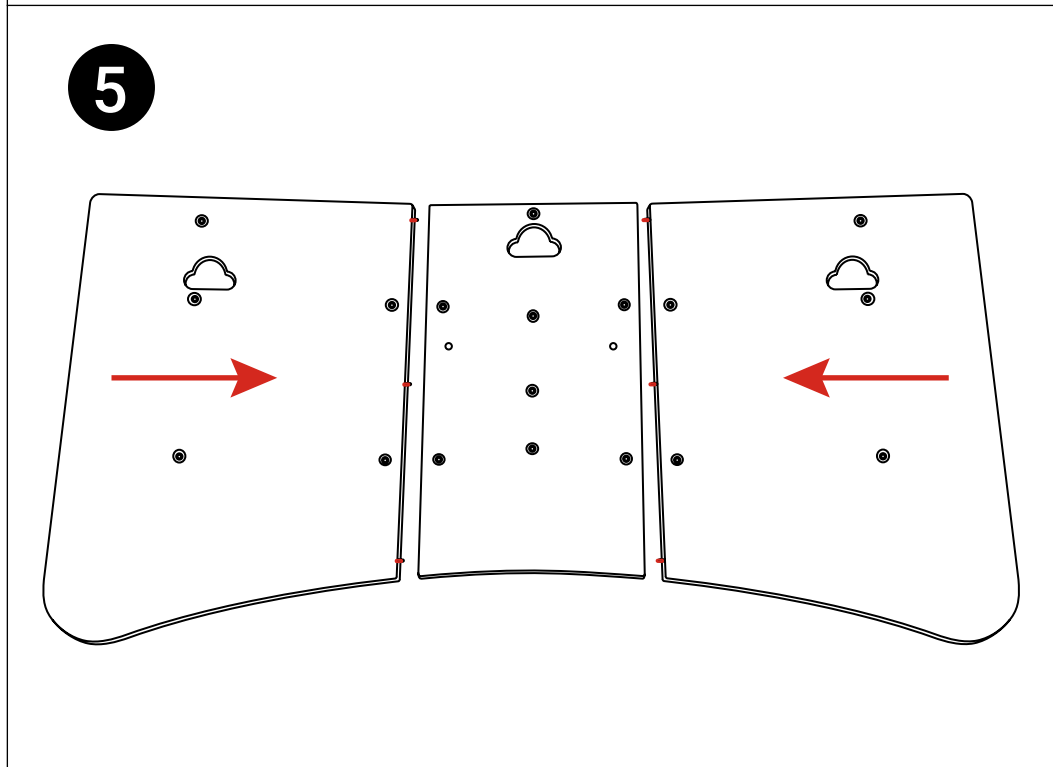
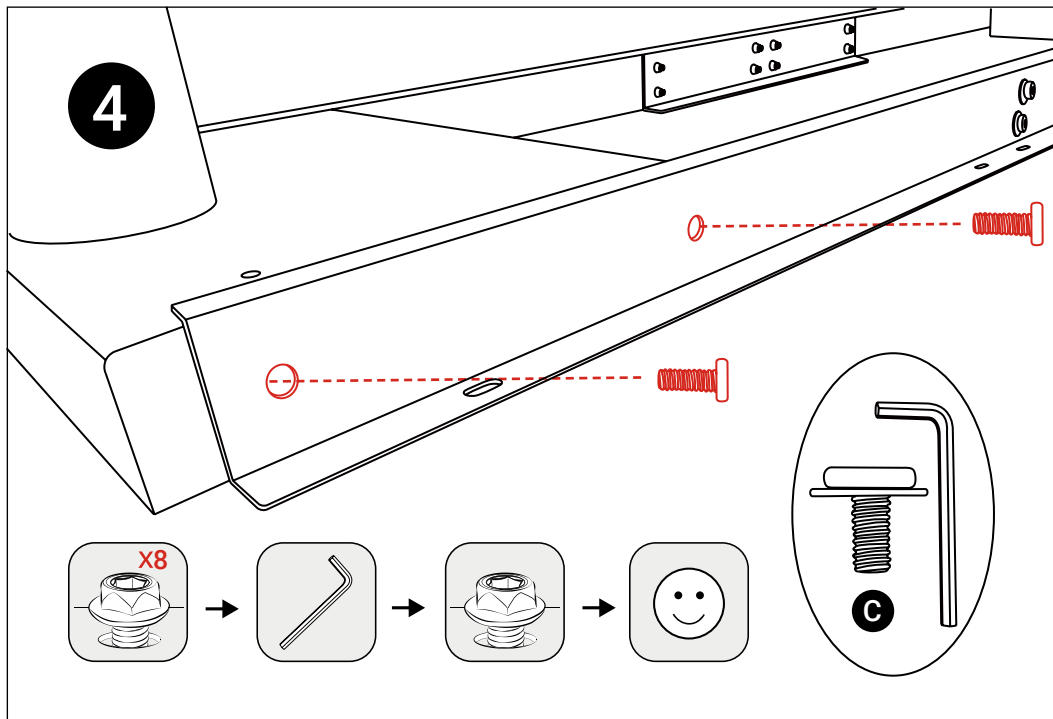


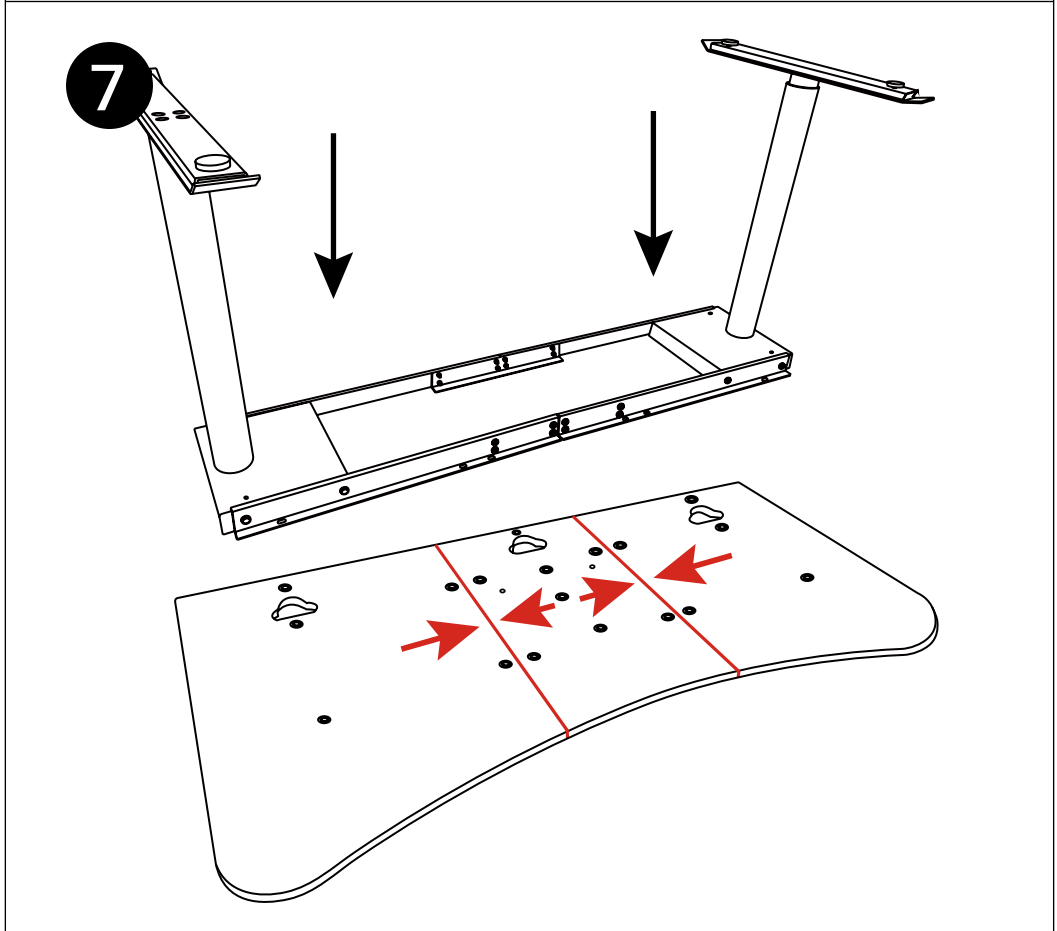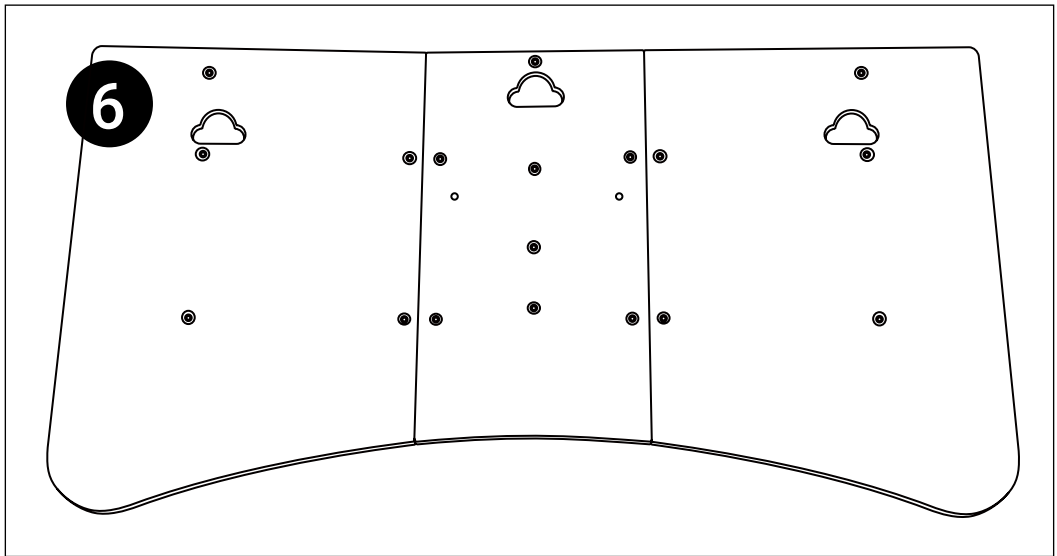


8

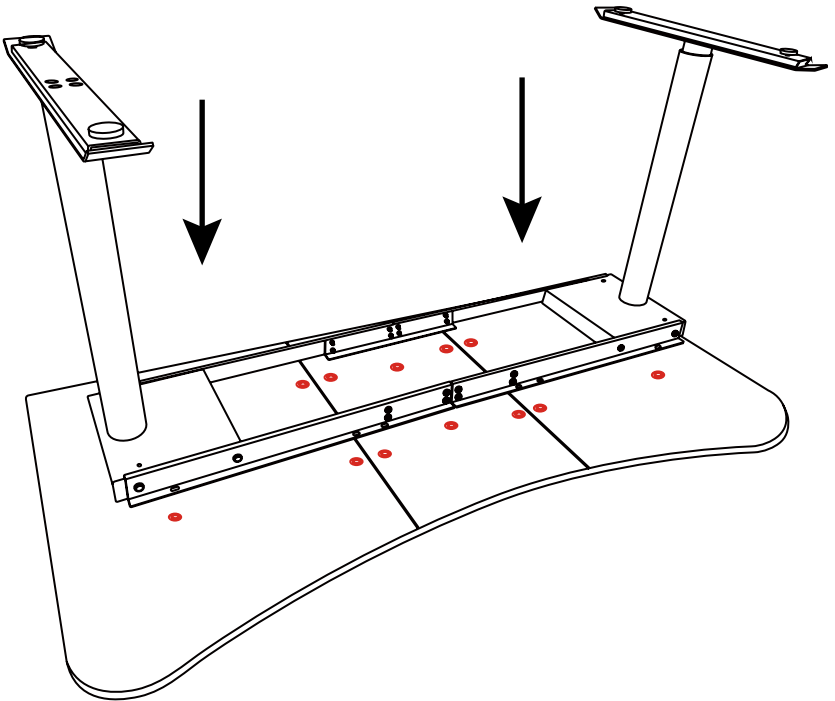


9

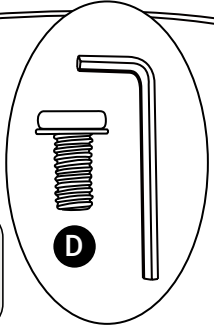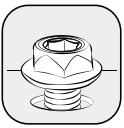
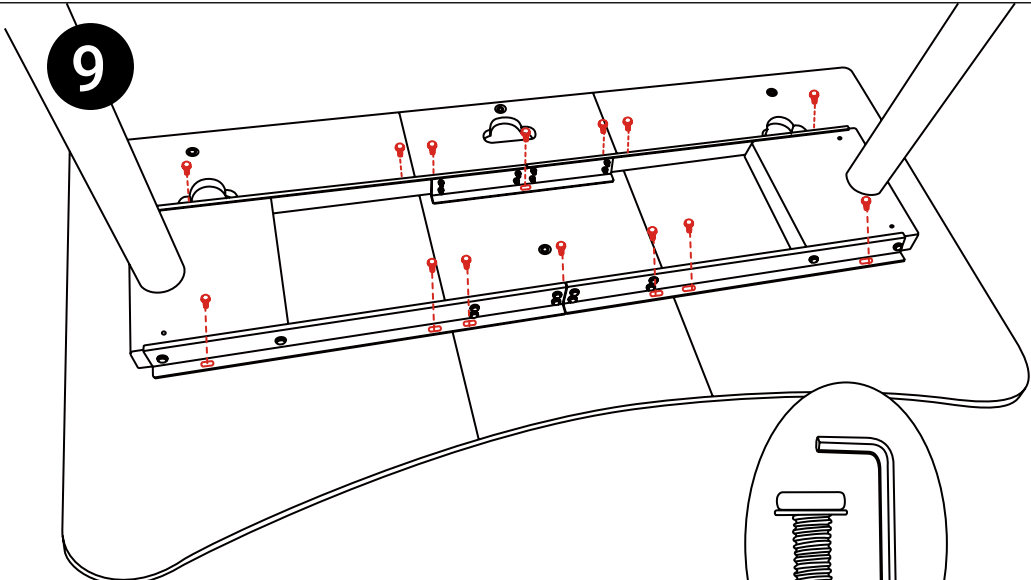




10


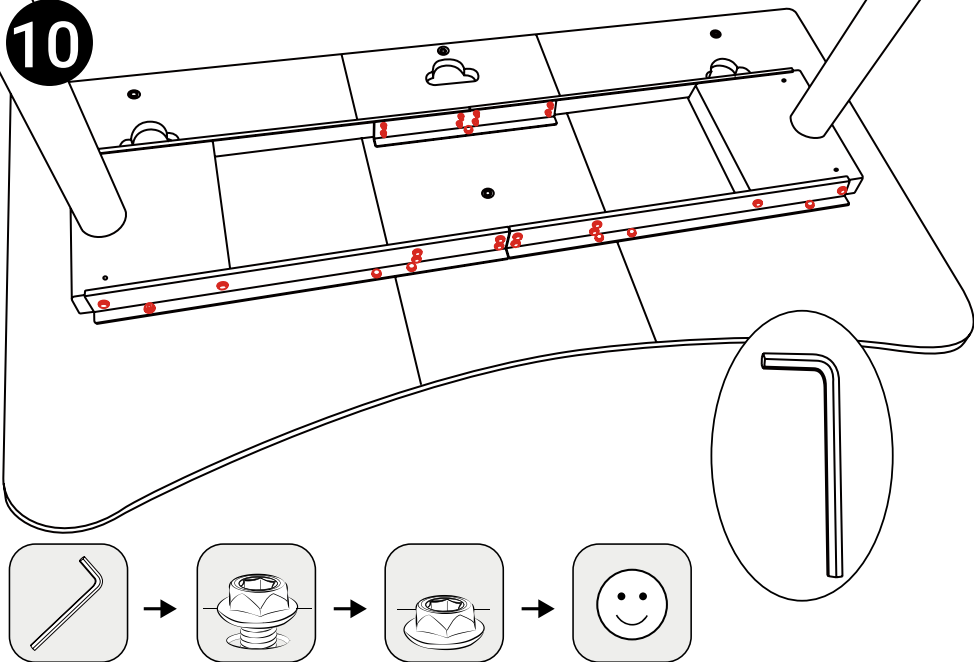


11

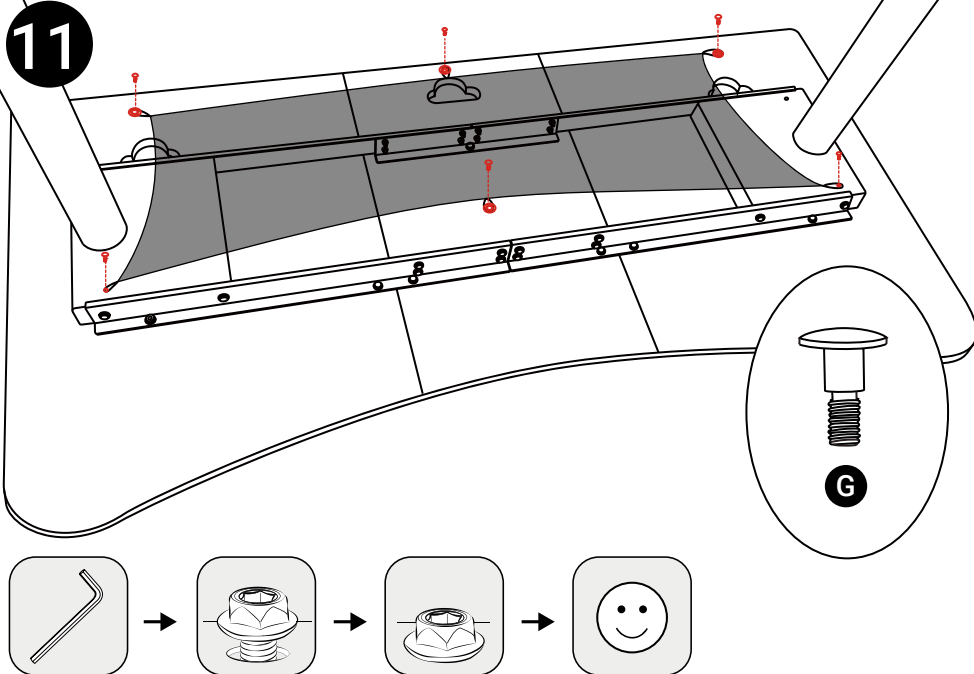

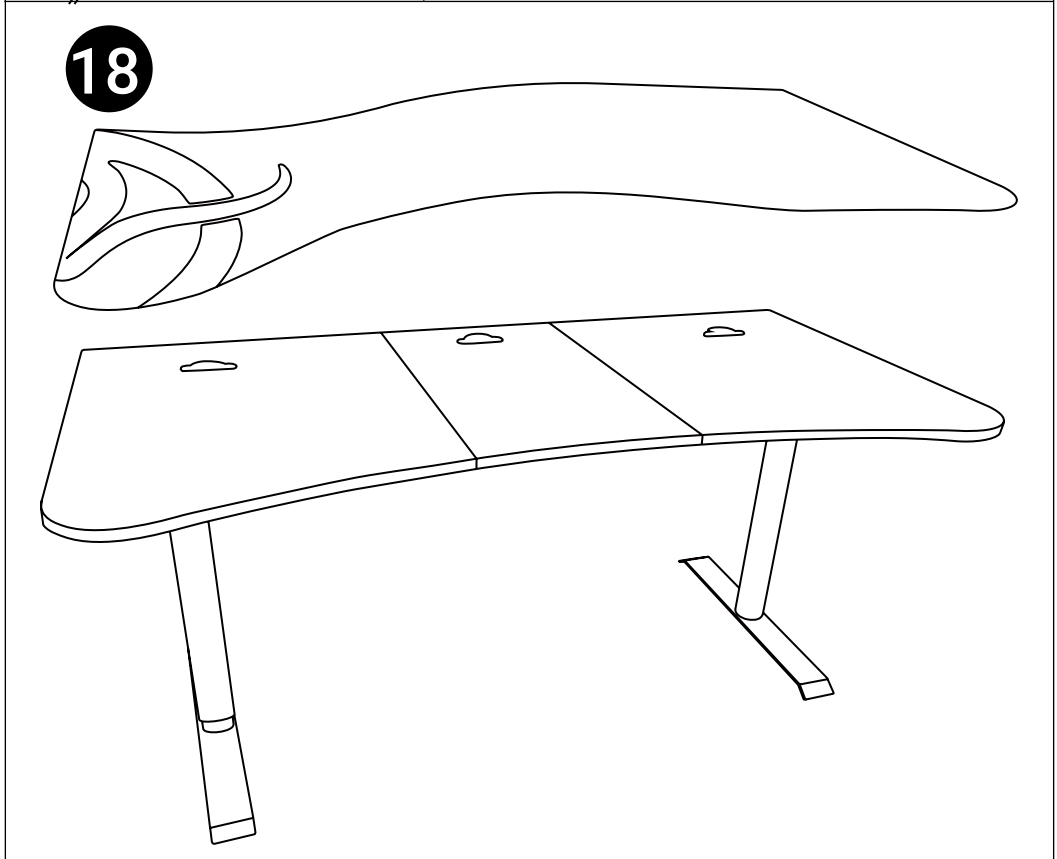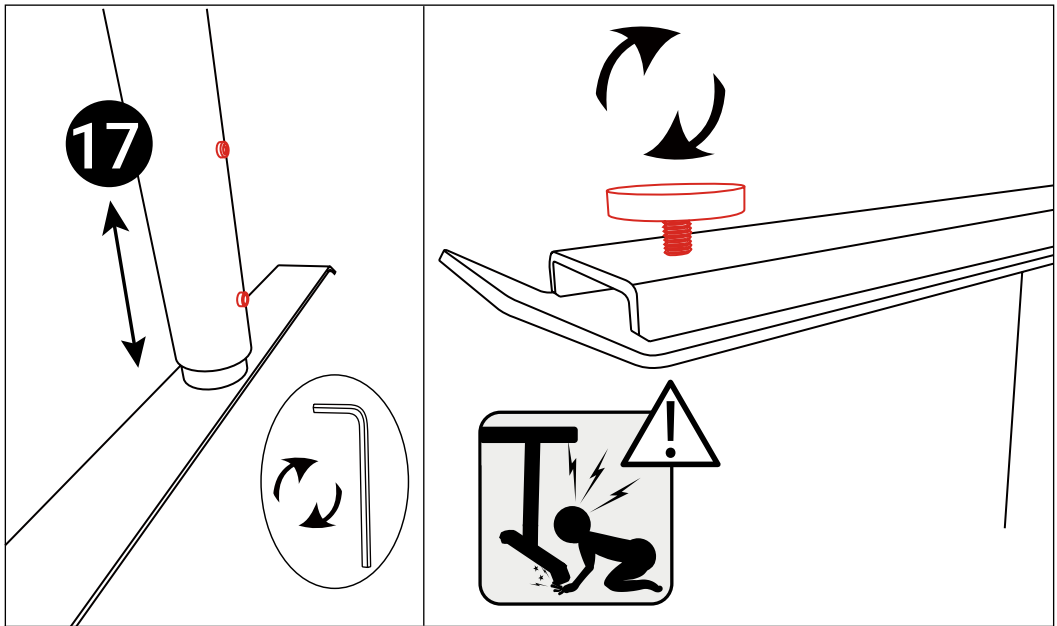

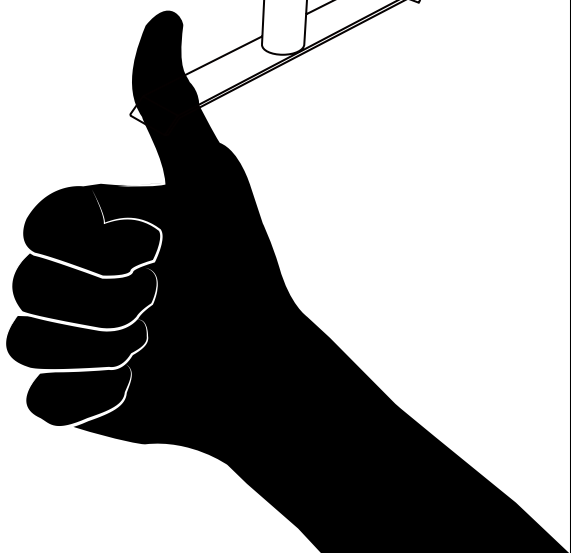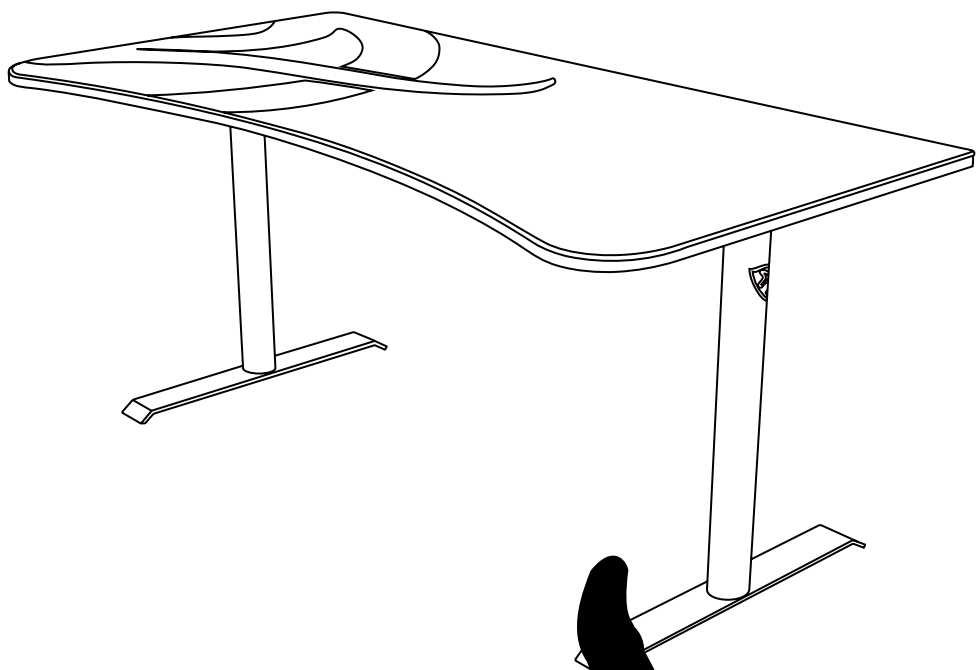

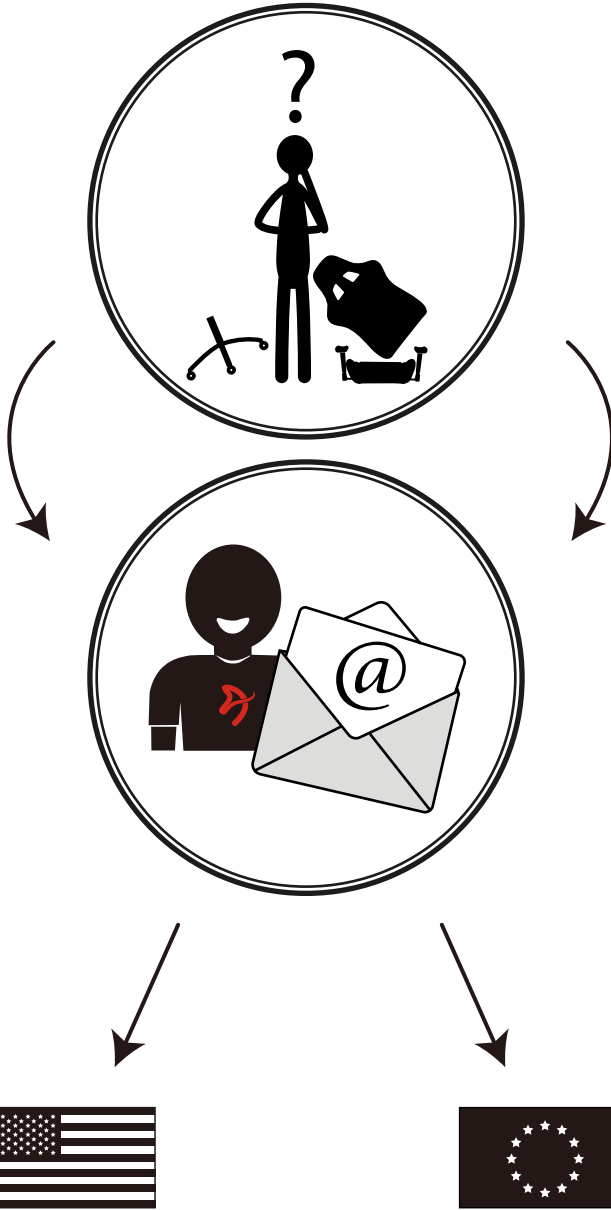

service@arozzi.com



support@arozzi.com

